


SS1 SAUNA CONTROL PANEL **USER GUIDE**

Commercial Sauna Controller for use in conjunction with the CRG Sauna System

This model is mounted in a controlled area for administrator use only. This must be turned on each day, and managed by facility staff.

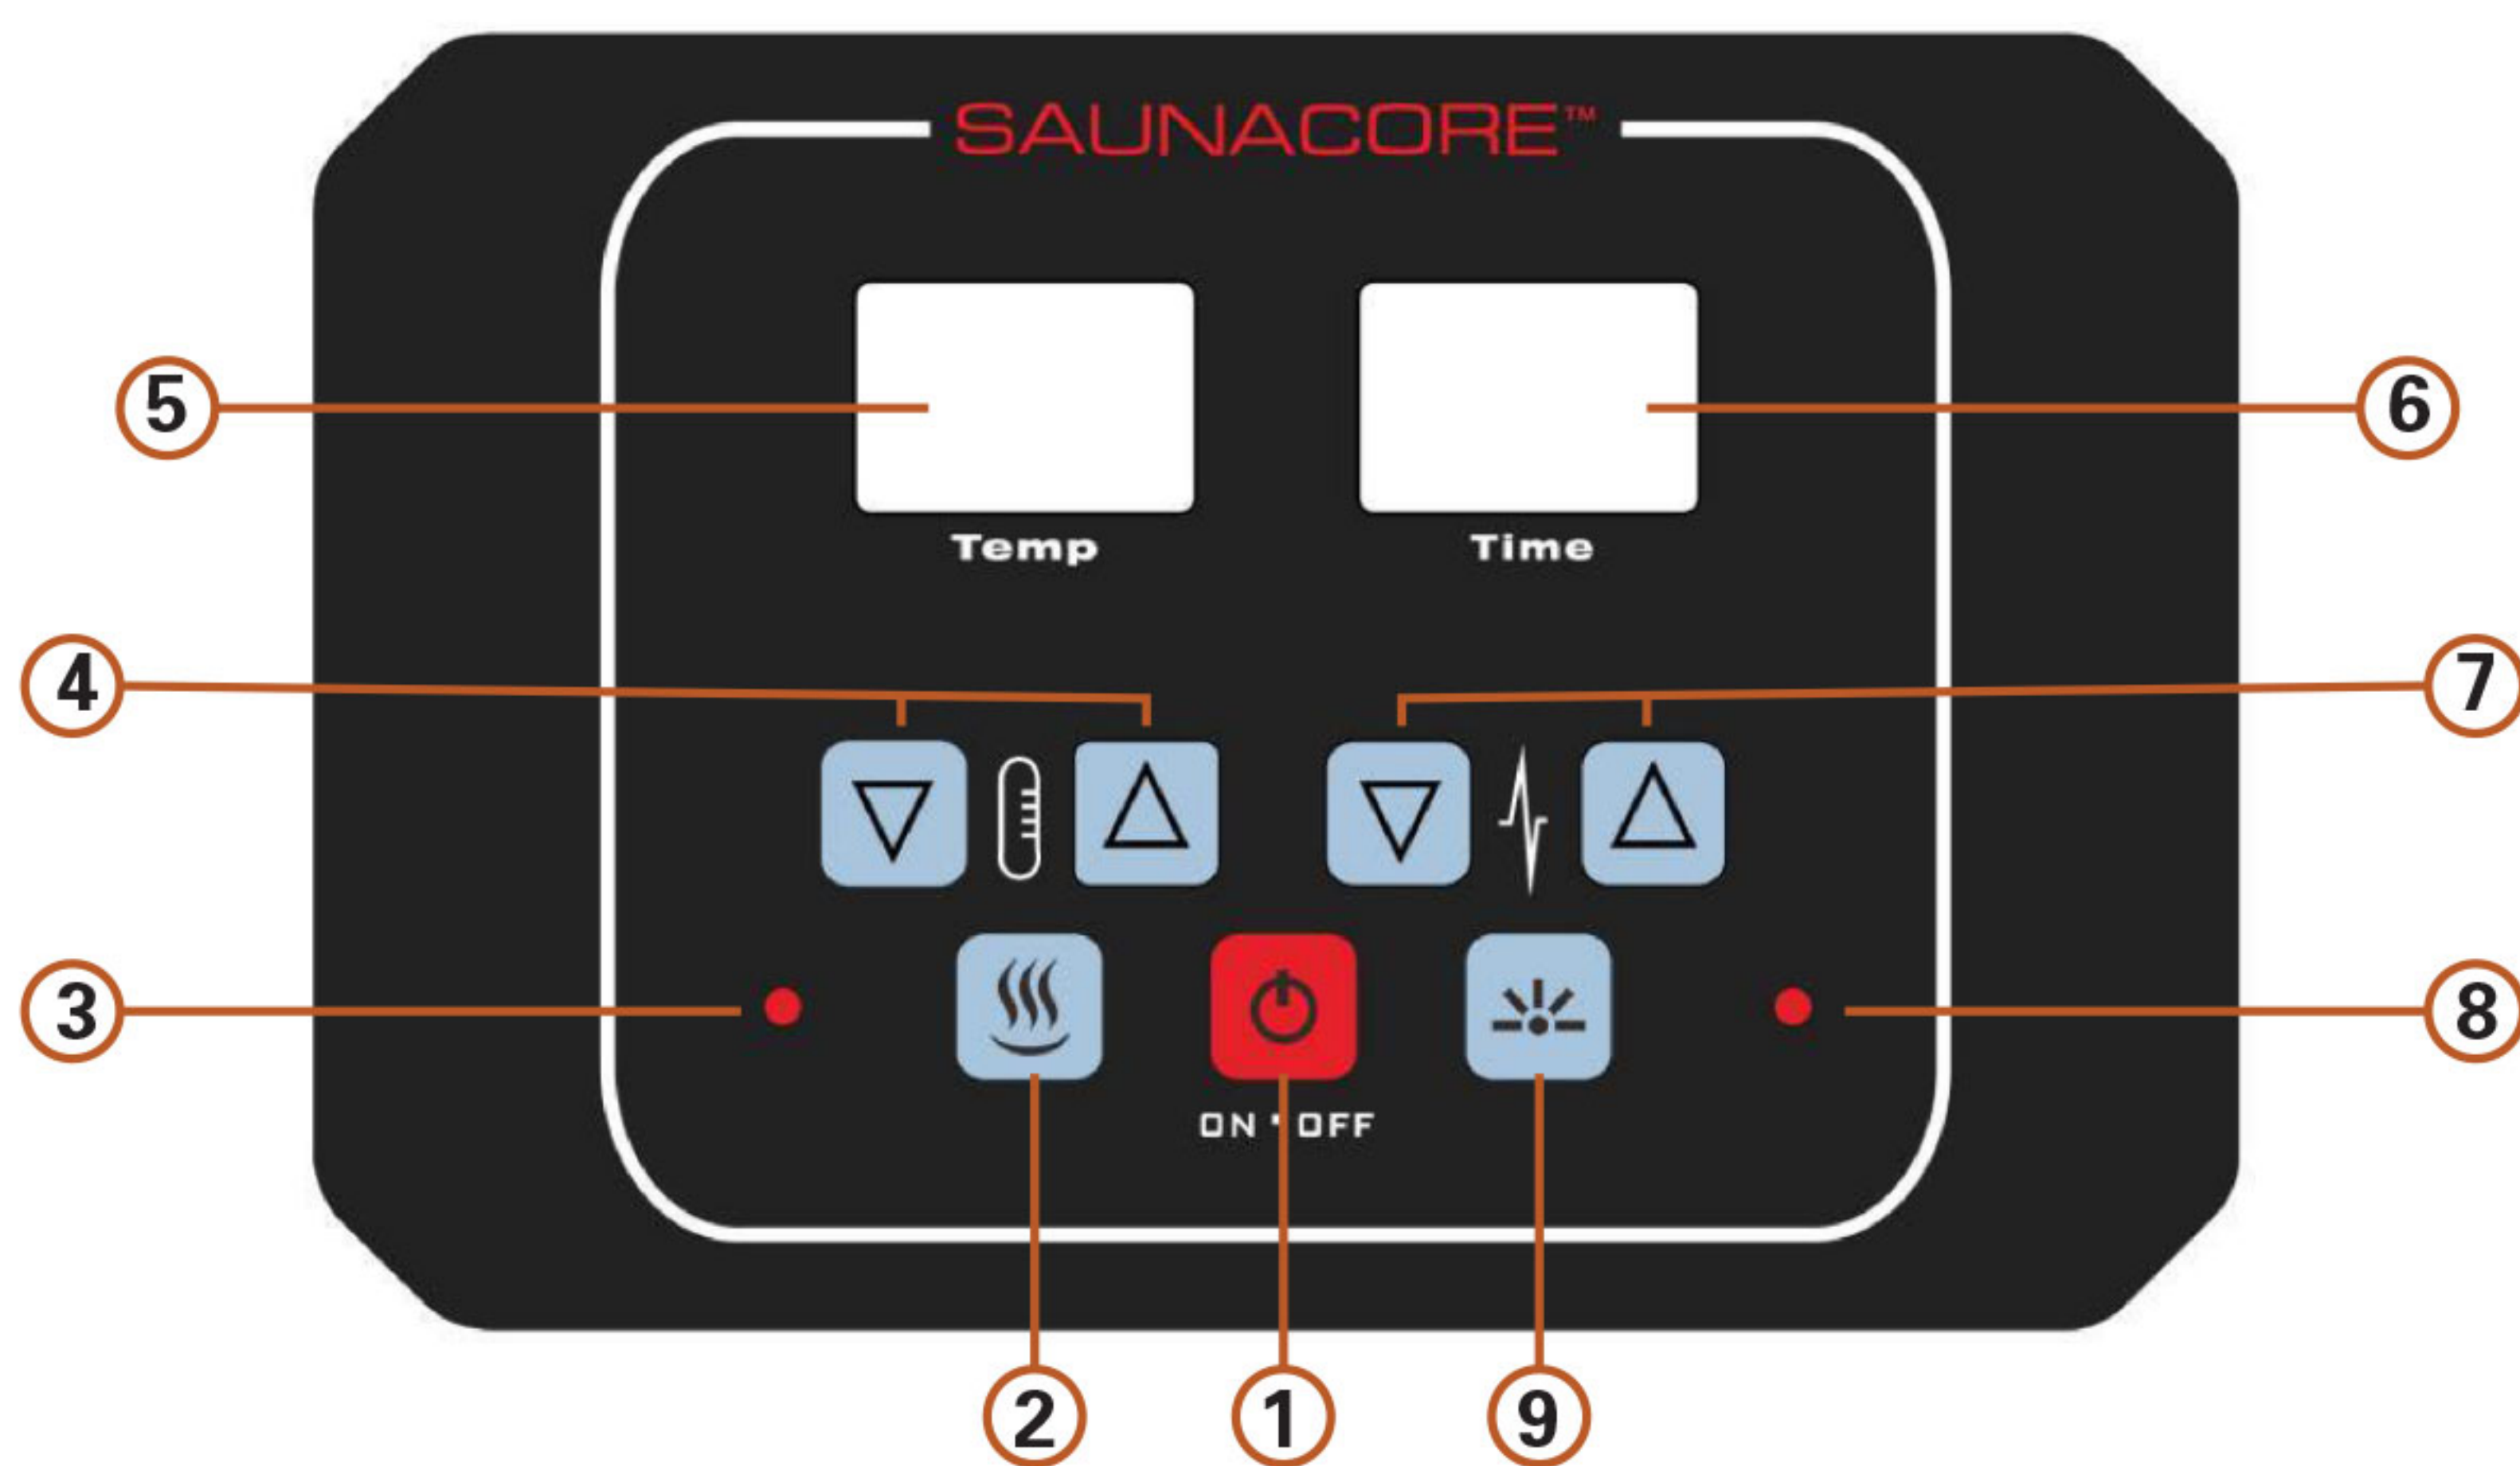

CONTROLLER FEATURES

- | | |
|---|------------------------------------|
| ① | Power ON/OFF Button |
| ② | Sauna Control Button |
| ③ | Sauna Running Indicator LED |
| ④ | Sauna Temperature Adjust Up & Down |
| ⑤ | Temperature Display Screen |
| ⑥ | Time Display Screen |
| ⑦ | Steam/Time Adjust Up & Down |
| ⑧ | Power Standby Indicator LED |
| ⑨ | Sauna Lights ON/OFF Button |

SS1 SAUNA CONTROL PANEL **USER GUIDE**

/// POWERING ON/OFF

When control panel has power and is in a *standby state*, Power Indicator LED should be lit. ●



Press Power Button to *activate controller system*;

Power indicator LED turns off; ○
Opens all keypad functions and controller is ready for operation.

Digital temperature and time screens display “- - -”



Press Power Button again to perform shut down operation, and close all the functions which are open;
Controller *returns to standby state*;
Power Indicator LED should be lit. ●




With system activated; ○
press Sauna Control Button to open sauna functions.
Sauna Indicator LED will be lit. ●



Press button again to close sauna functions;
Sauna Indicator LED turns off. ○

/// SETTING SAUNA TIME

With system activated; ○
Sauna Functions LED lit; ●

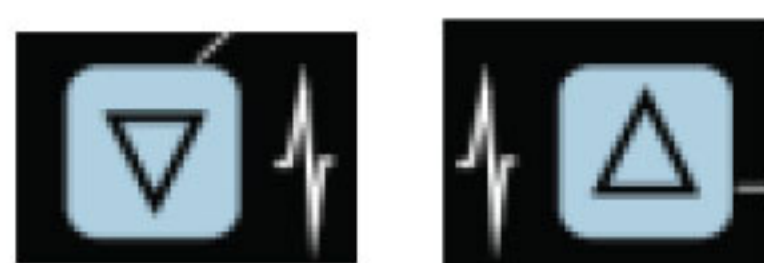

Press the Steam/Time Adjust Button, up or down for desired setting. Digital screen will display the adjusted time. Sauna time adjustment range is 5 - 60 minutes in 5 minute increments. When set time has concluded, the sauna heater shuts off automatically. Default heater running time is 60 minutes.

/// SETTING SAUNA TEMPERATURE

While system is activated; ○
Sauna Functions LED lit; ●



Press the Temperature Adjust Button, up or down for desired heat setting. Digital screen will display the adjusted temperature values, flashing as increments are adjusted, one degree at a time.

Temperature ranges are 50° - 194°F (10° - 90°C).

When ambient sauna temperature is higher than desired temperature, the sauna heater will shut off automatically. When the ambient temperature is 2° lower than preset sauna temperature, the heater will automatically engage. Default temperature is 194°F (90°C).

/// SETTING SAUNA LIGHTS

While system is activated; ○
Sauna Functions LED lit; ●



Press the Sauna Light Button to switch lights on/off.

/// SETTING FAHRENHEIT/CELSIUS UNITS

While the system is *in standby state*, but power is not on, (or 10 seconds after system is powered off);
Power Indicator LED will be lit. ●



Hold Temperature Adjust **UP** Button for 2 seconds. The temperature digital screen will display F° or C° units.



Adjust between Celsius° and Fahrenheit° units by pressing the Temperature Adjust **DOWN** button to desired setting.

Wait 5 seconds; the temperature unit settings are set, and the control panel returns to *standby state*.
Power Indicator LED will be lit. ●